


# Руководство по монтажу K2092

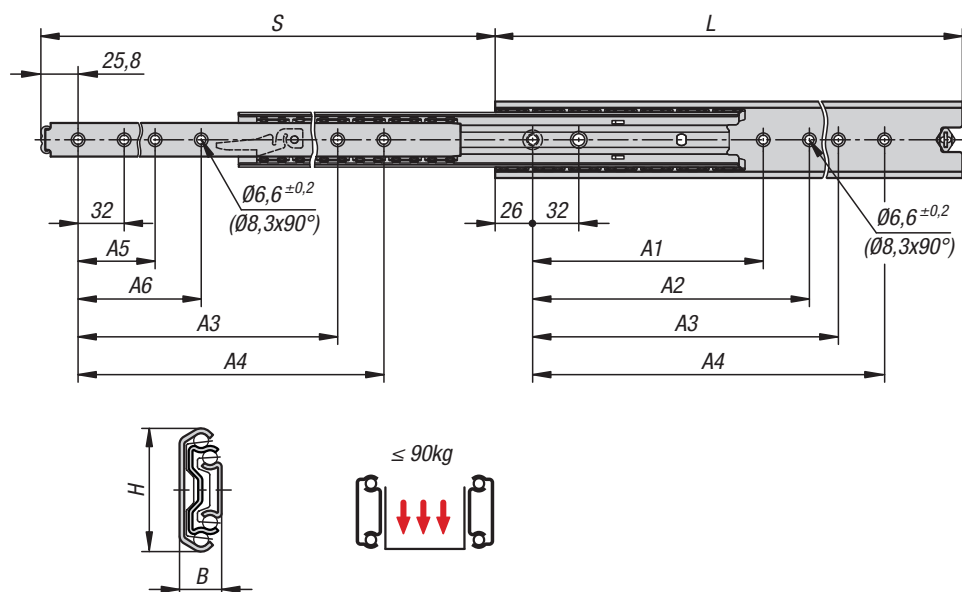

| Номер заказа | L   | S   | A1  | A2  | A3  | A4  | A5  | A6  | Грузоподъемность<br>для пары в<br>кг |
|--------------|-----|-----|-----|-----|-----|-----|-----|-----|--------------------------------------|
| K2092.0300   | 300 | 323 | -   | -   | 192 | 224 | -   | -   | 90                                   |
| K2092.0350   | 350 | 373 | -   | -   | 224 | 256 | -   | -   | 90                                   |
| K2092.0400   | 400 | 423 | 160 | 192 | 288 | 320 | 128 | 160 | 90                                   |
| K2092.0450   | 450 | 473 | 192 | 224 | 352 | 384 | 160 | 192 | 90                                   |
| K2092.0500   | 500 | 523 | 192 | 224 | 384 | 416 | 192 | 224 | 90                                   |
| K2092.0550   | 550 | 573 | 256 | 288 | 448 | 480 | 224 | 256 | 90                                   |
| K2092.0600   | 600 | 623 | 256 | 288 | 480 | 512 | 256 | 288 | 90                                   |
| K2092.0650   | 700 | 723 | 288 | 320 | 576 | 608 | 288 | 320 | 90                                   |
| K2092.0700   | 790 | 803 | 352 | 384 | 672 | 704 | 320 | 352 | 90                                   |

1) Используйте все крепежные позиции, чтобы добиться максимальной допустимой нагрузки.

2) Монтаж шины под центральной линией ящика.

## Крепление шин

