Installation instructions for eccentric quick lock



Insert by pushing and clamp by swivelling

Loosen by swivelling and turning



