




Instrucciones de instalación K2097

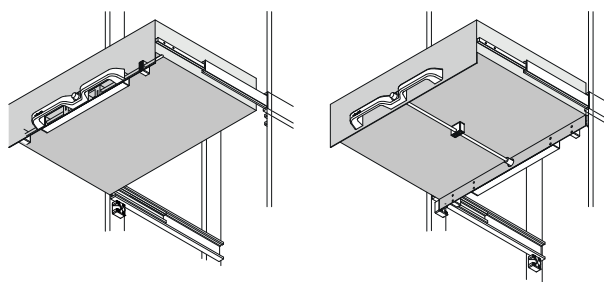


K2097.060
K2097.120

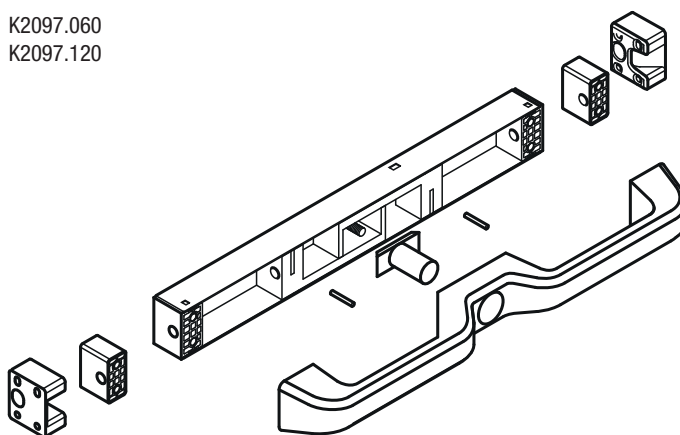

K2097.91

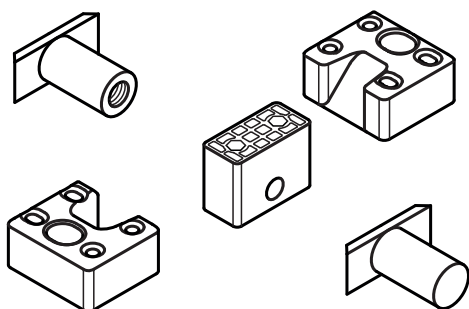


K2097.900500
K2097.900750
K2097.910500
K2097.910750

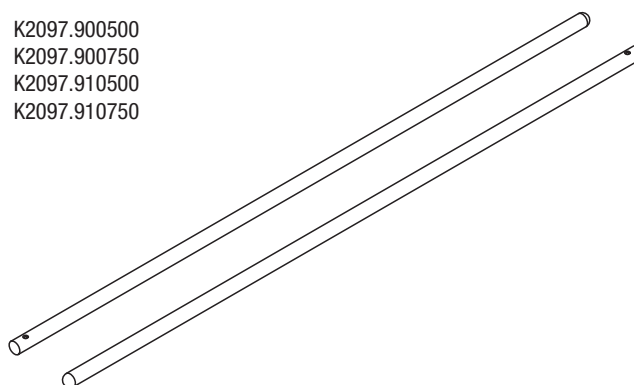


K2097.60 + K2097.900500 o K2097.910500

K2097.120 + K2097.900750 o K2097.910750

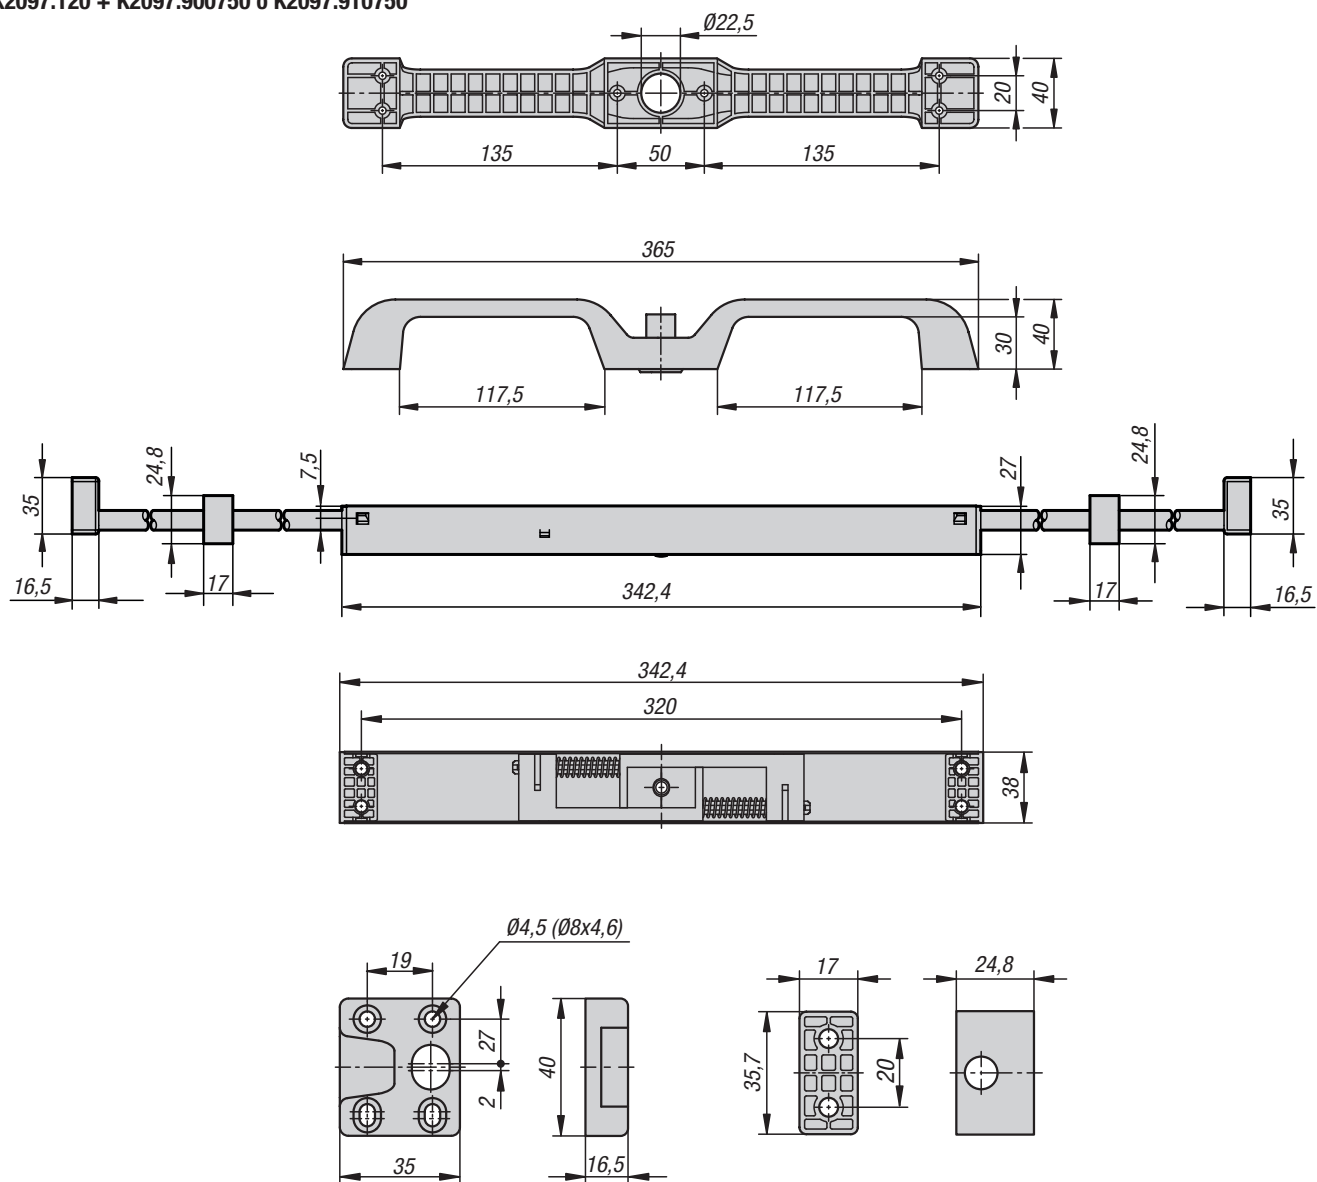


K2097.60 + K2097.900500
 o K2097.910500 + K2097.91
 K2097.120 + K2097.900750
 o K2097.910750



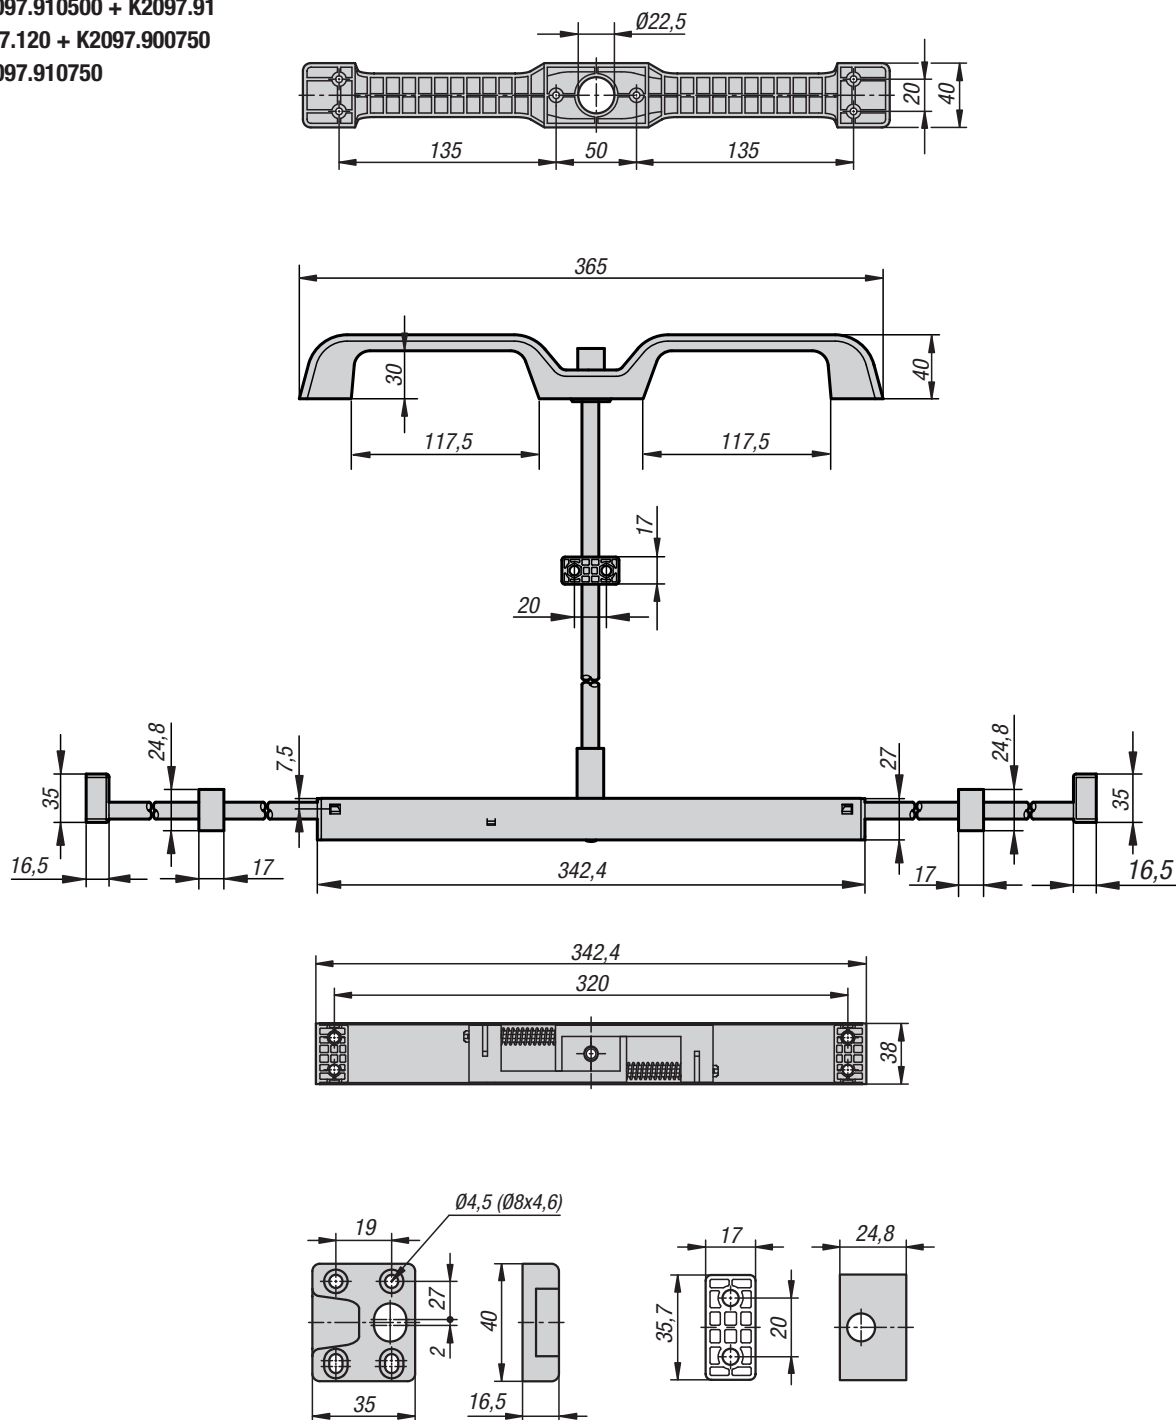




Sostener y encajar



El enclavamiento en posición abierta no se puede utilizar para los carriles con sobre extensión (más del 100% de extensión de apertura).

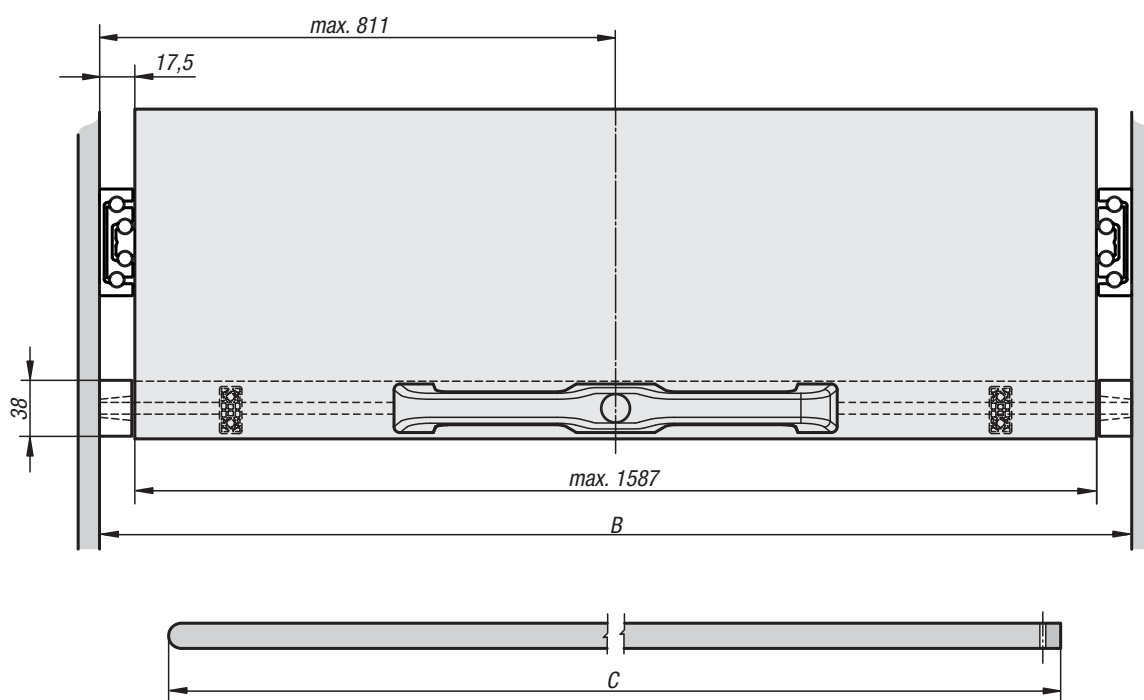

$C = (B - 122,3) / 2$
 $C < 500$
 $C > 500$

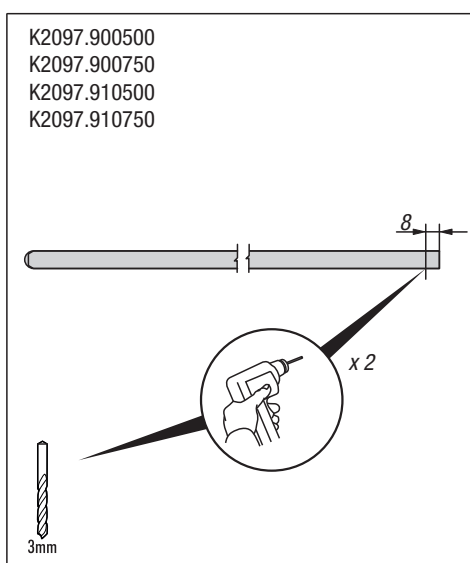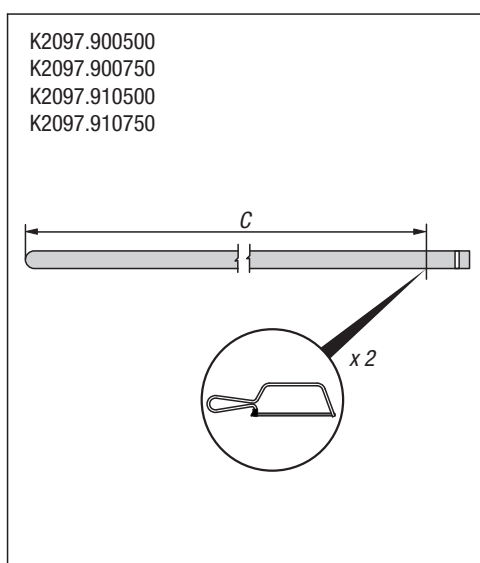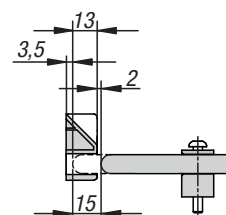

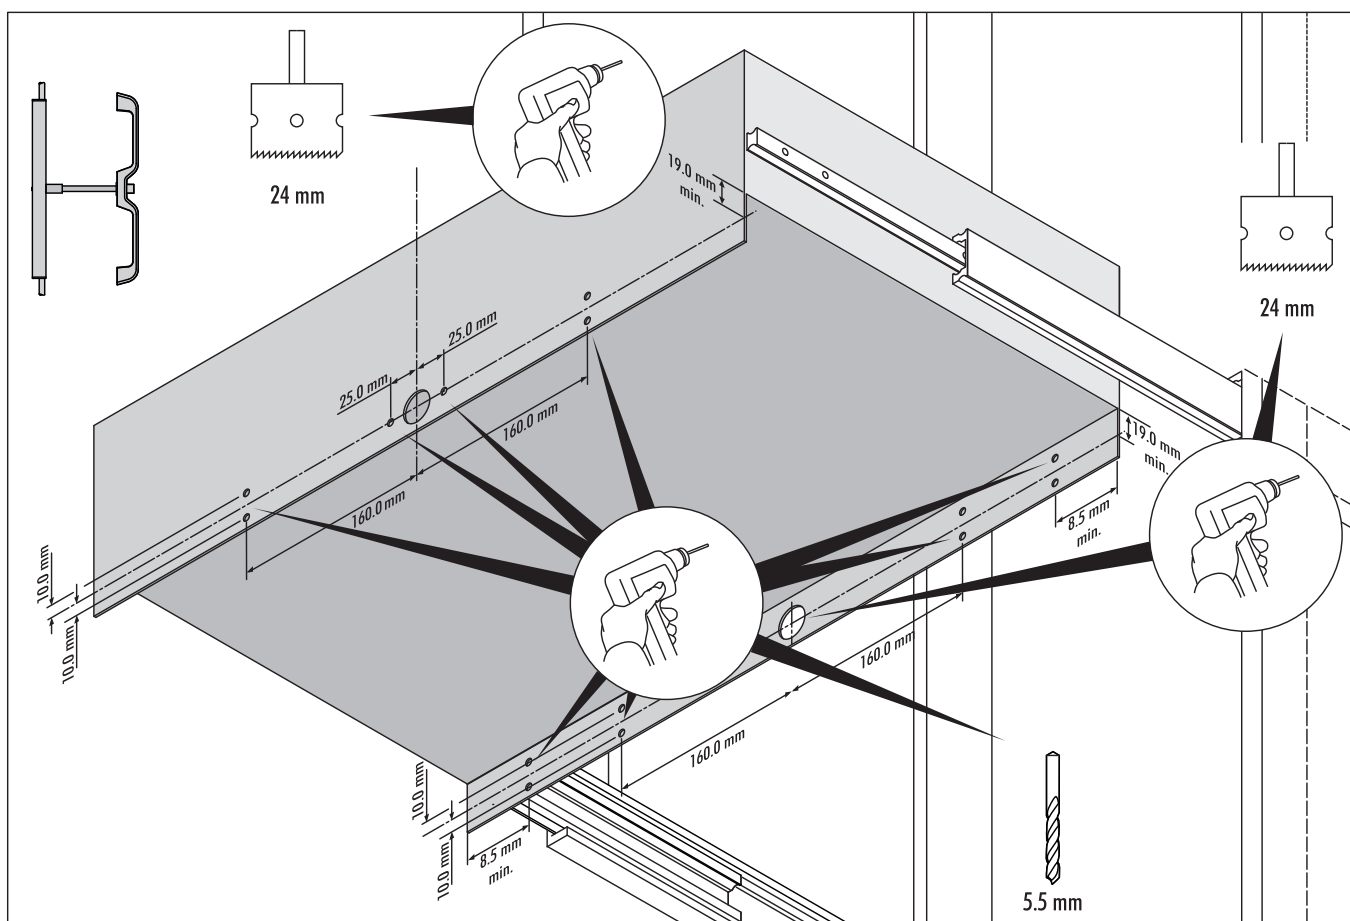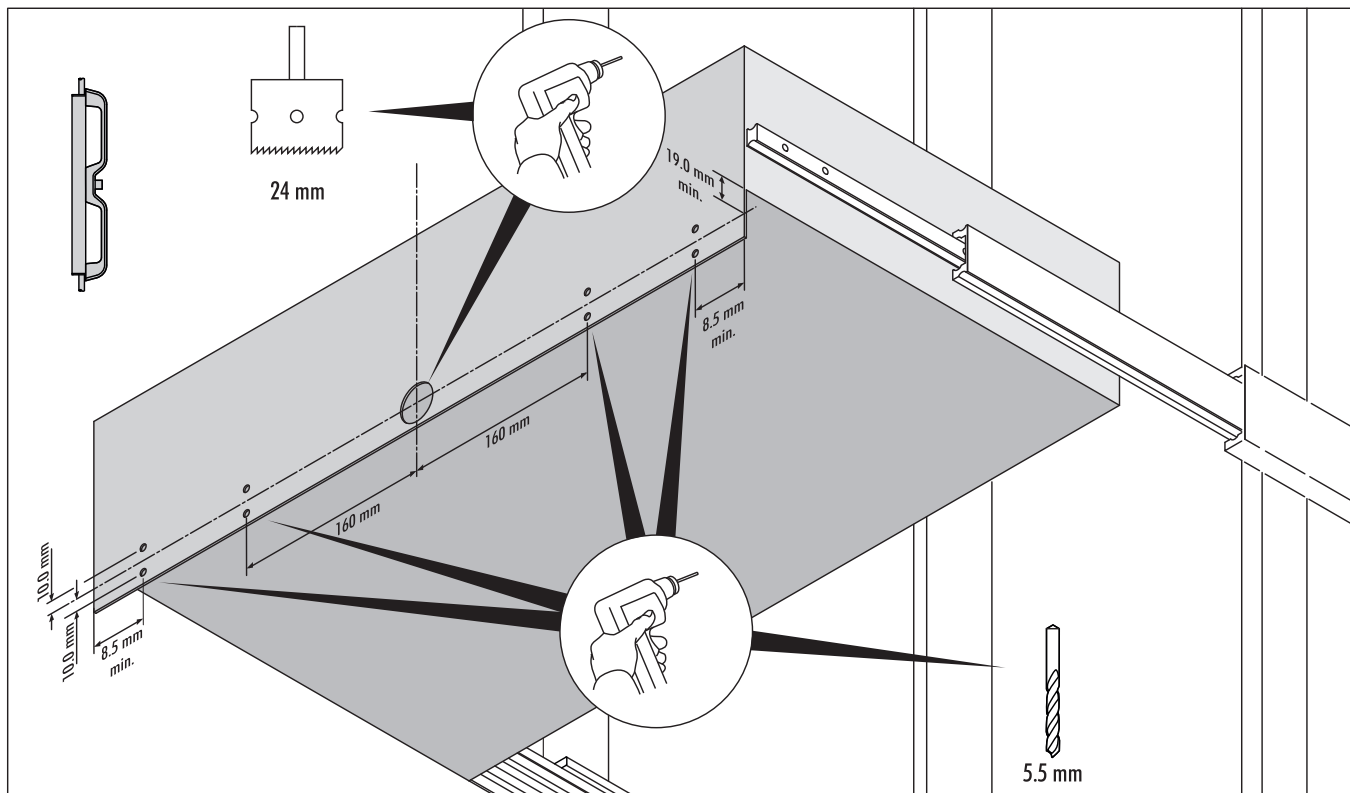

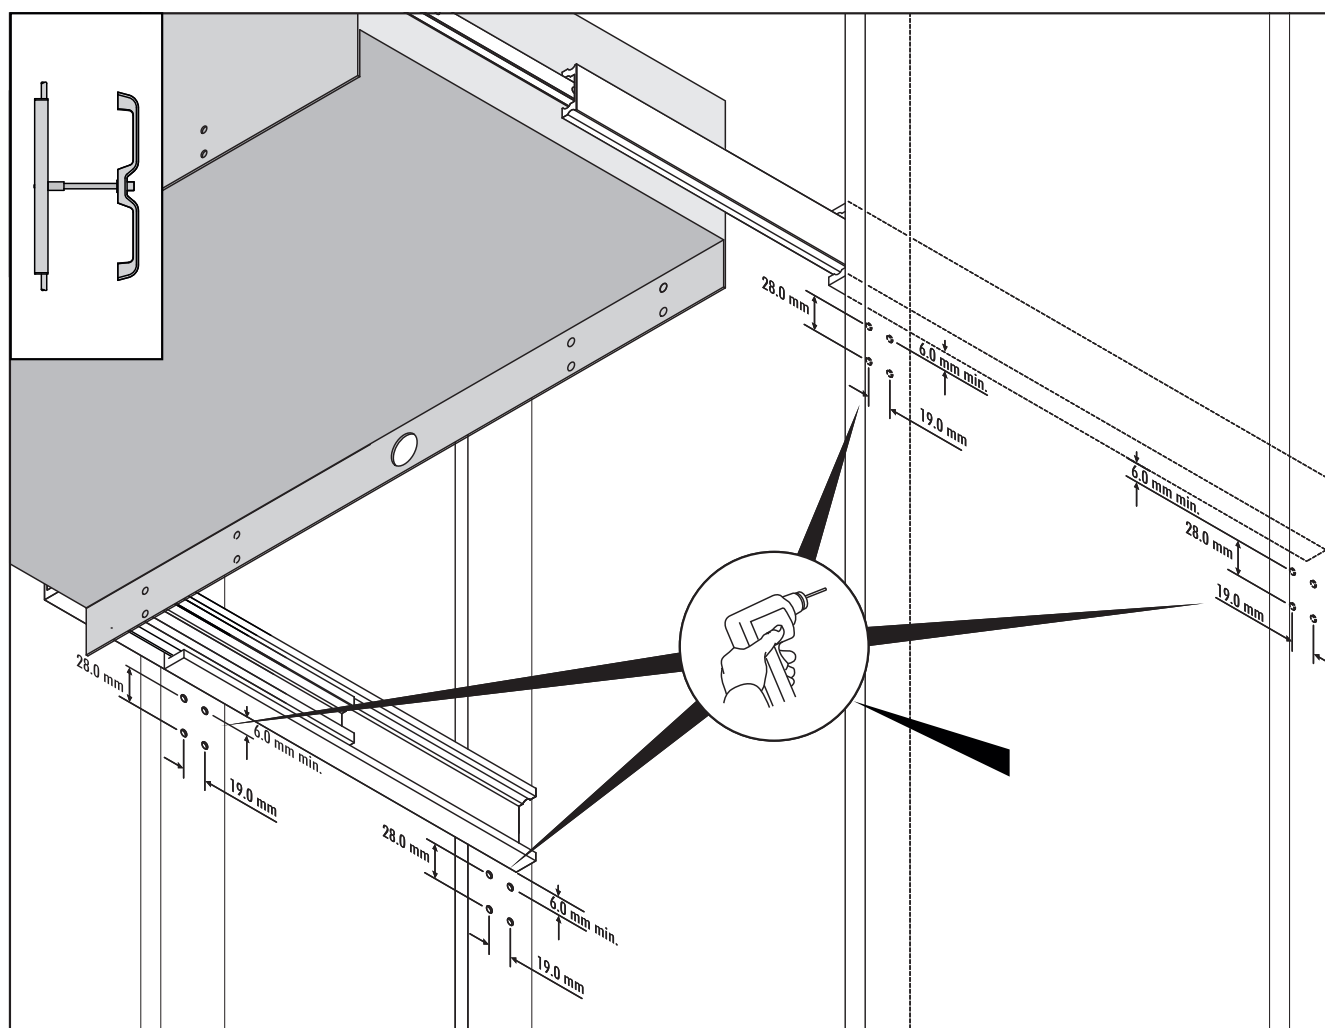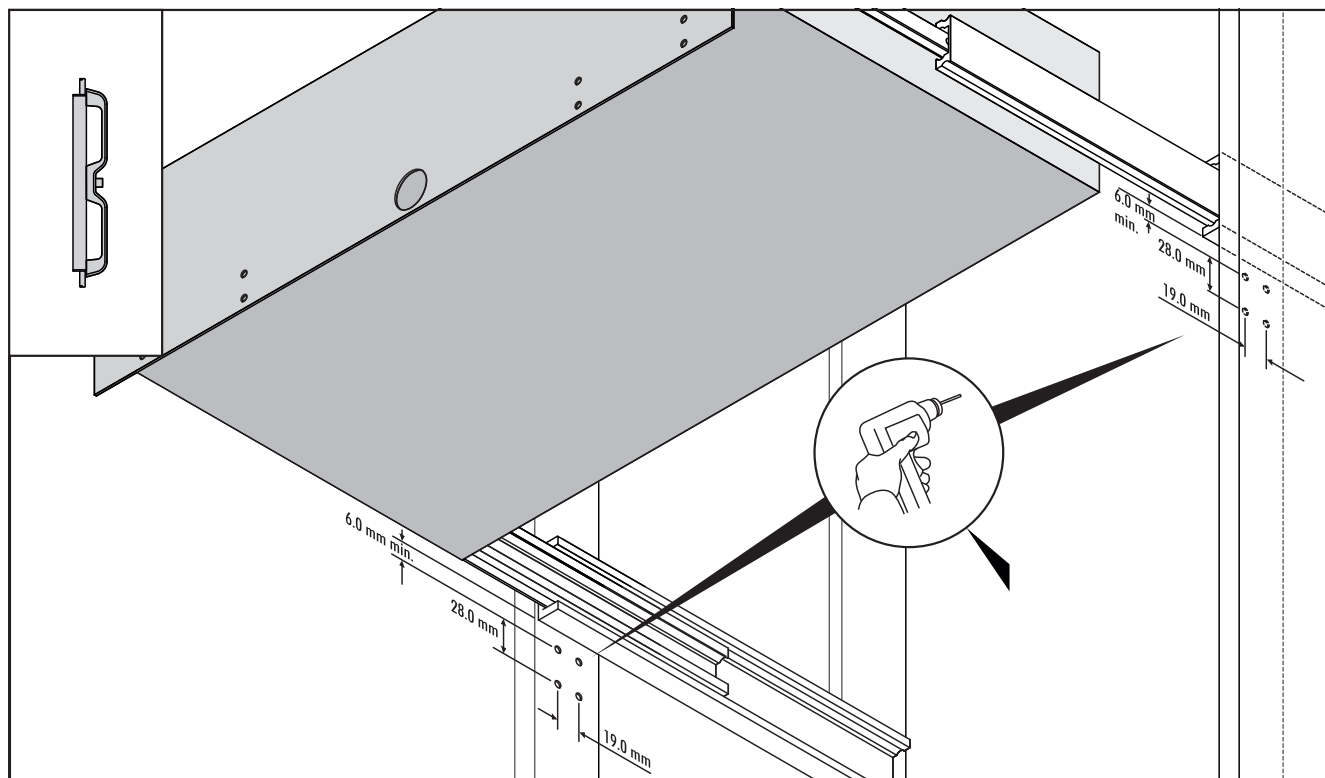

Perforación y fijación en función de la situación

