

## Spacing washers

### Item description/product images



### Description

**Material:**

Carbon steel.


**Version:**

Tempered, black oxidised.


Contact faces ground.

**Note:**

The spacing washer is used to alter the clamping range of hook clamps and hook holders. When a spacing washer is inserted between the base and the hook holder or riser cylinder it prevents damage to the support face.

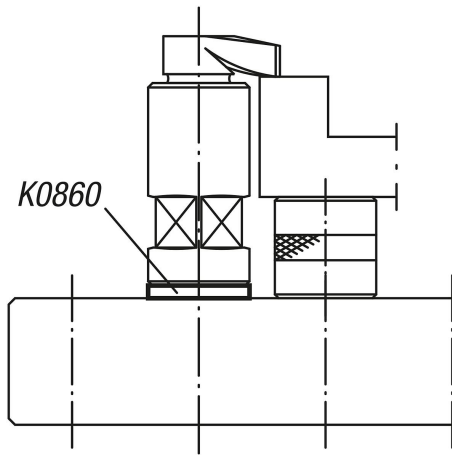

### Drawings

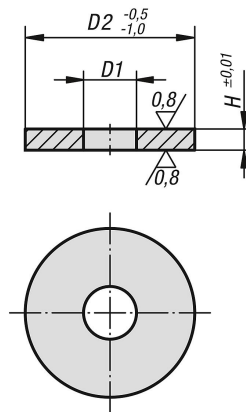

### Overview of items

#### Spacer washers, ground

Order No.	D1	D2	H
K0860.08003	9	24	3
K0860.08005	9	24	5
K0860.08008	9	24	8
K0860.12001	12,5	40	1
K0860.12003	12,5	40	3
K0860.12005	12,5	40	5
K0860.16001	16,5	50	1
K0860.16003	16,5	50	3

**Overview of items**

Order No.	D1	D2	H
K0860.16005	16,5	50	5
K0860.16105	16,5	60	5