




설치 지침 K2097

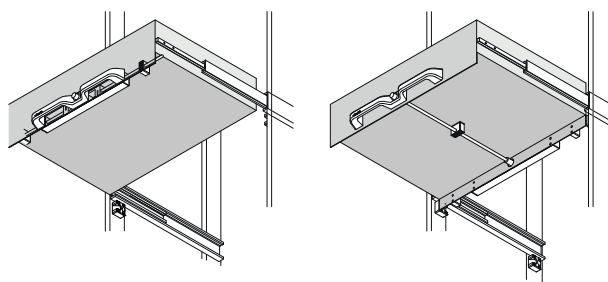


K2097.060
K2097.120

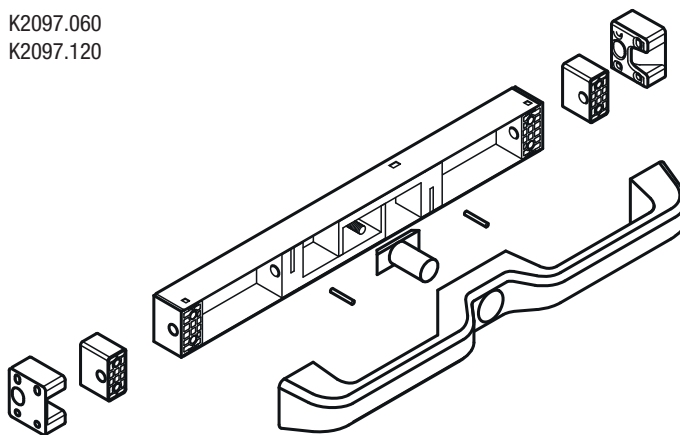


K2097.91

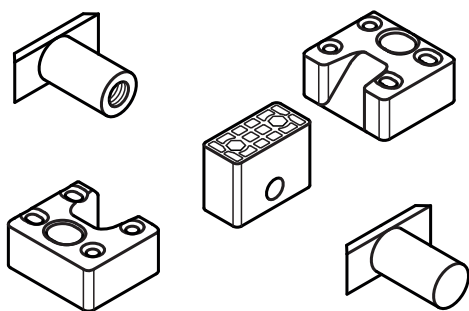


K2097.900500
K2097.900750
K2097.910500
K2097.910750



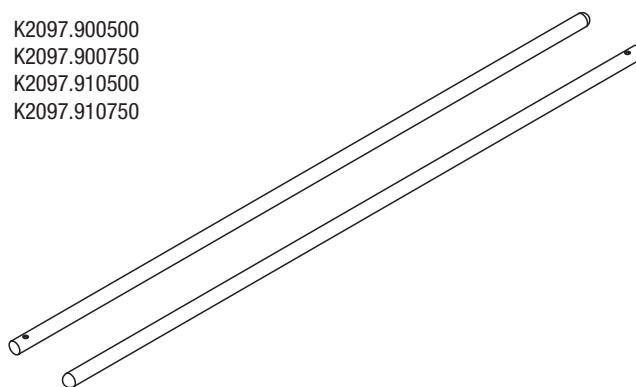




K2097.60 + K2097.900500 또는 K2097.910500
K2097.120 + K2097.900750 또는 K2097.910750


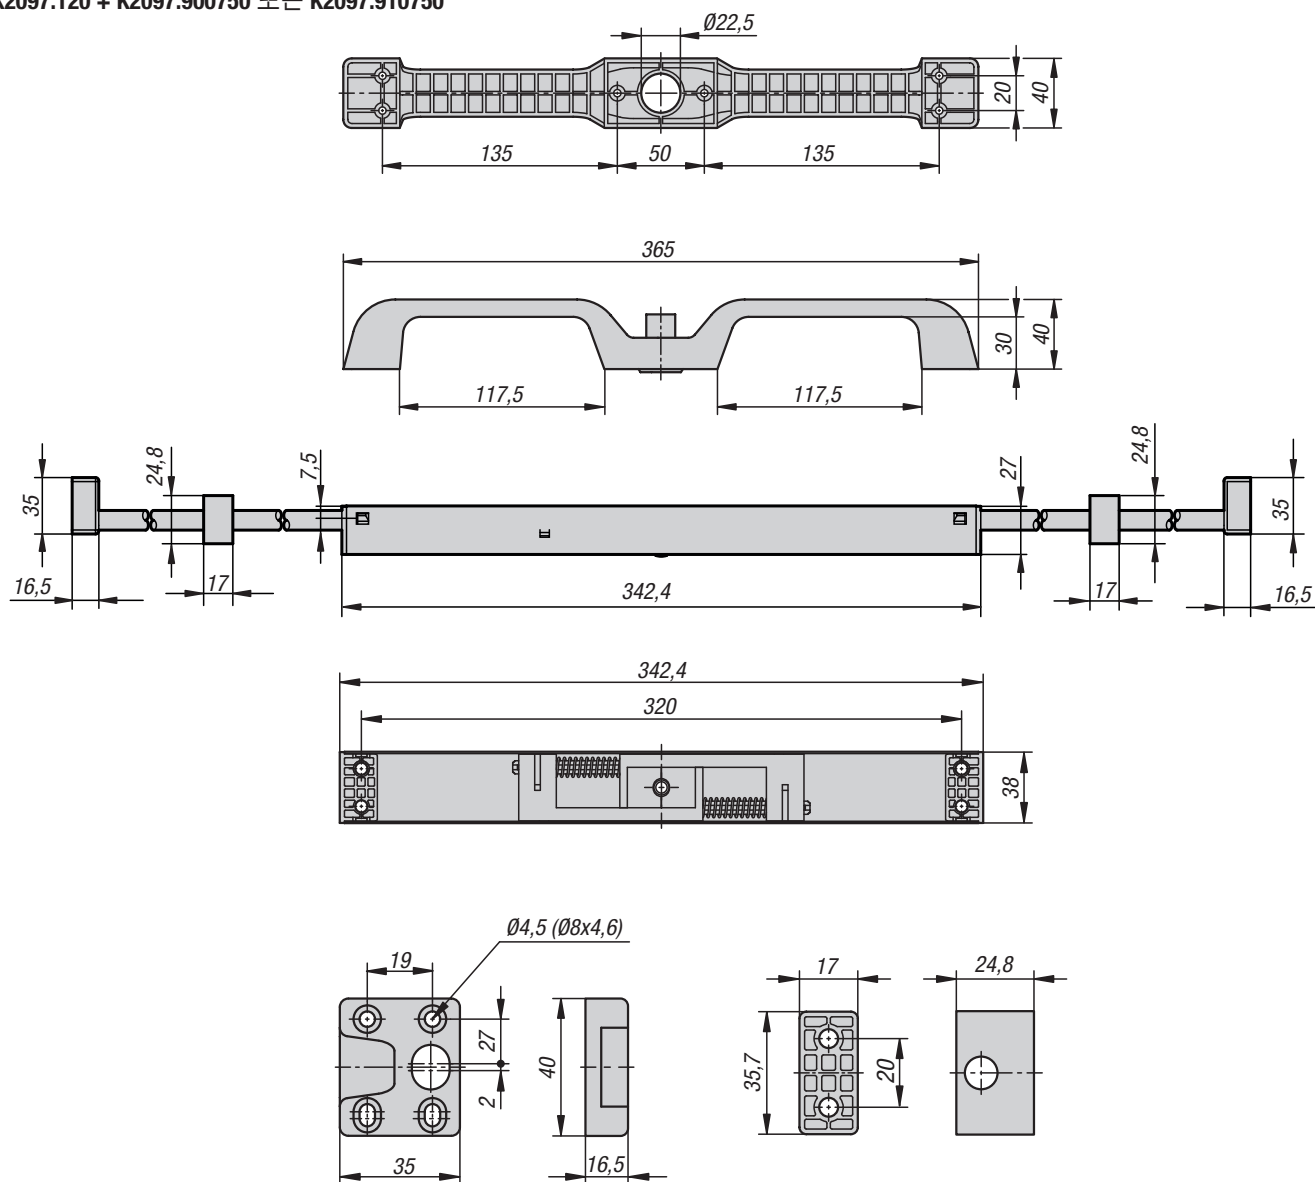


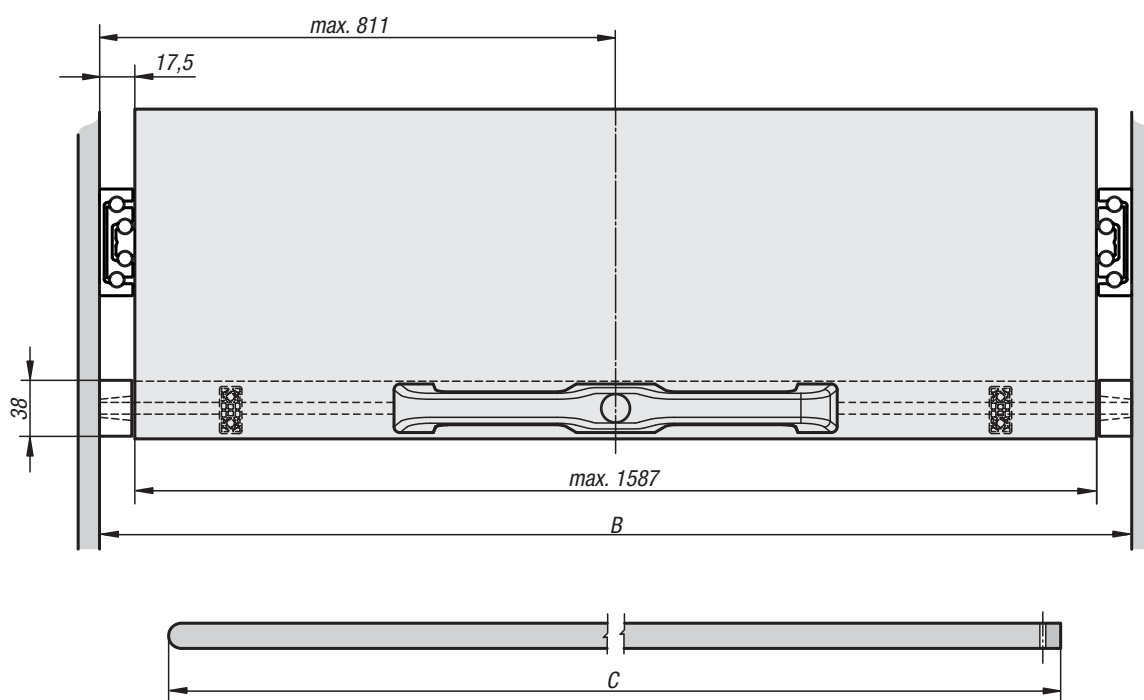

 $C = (B - 122,3) / 2$
 $C < 500$
 $C > 500$

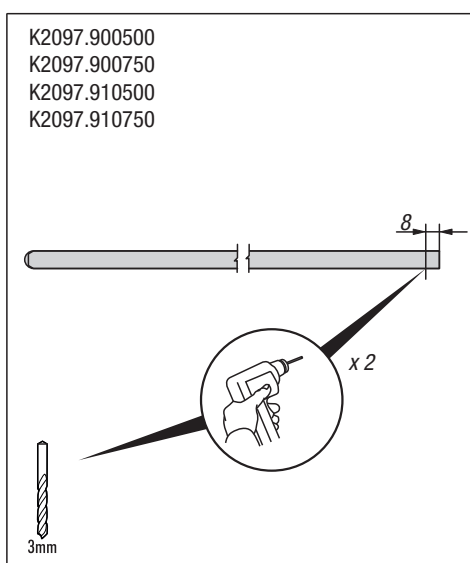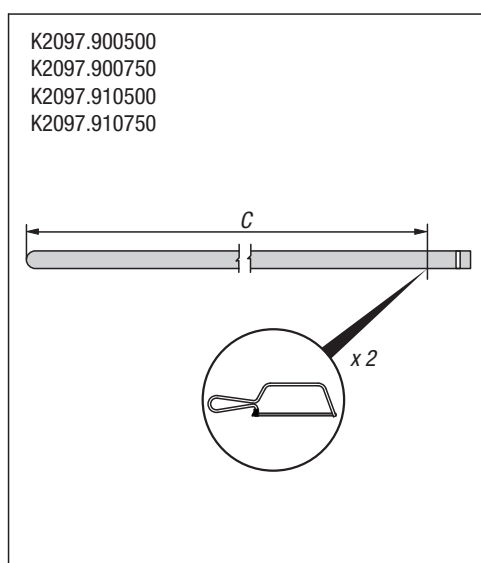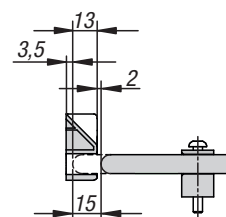

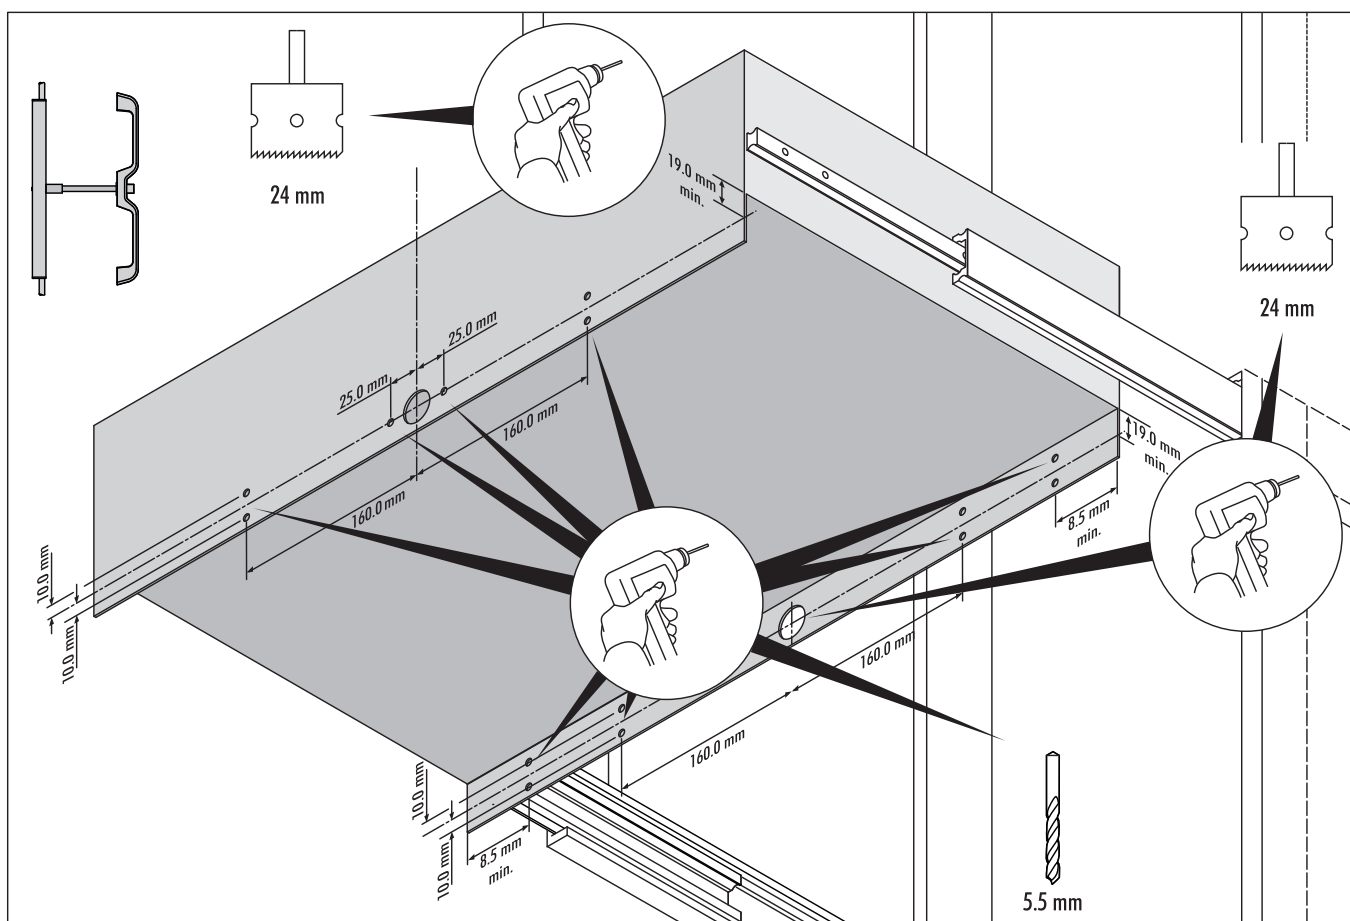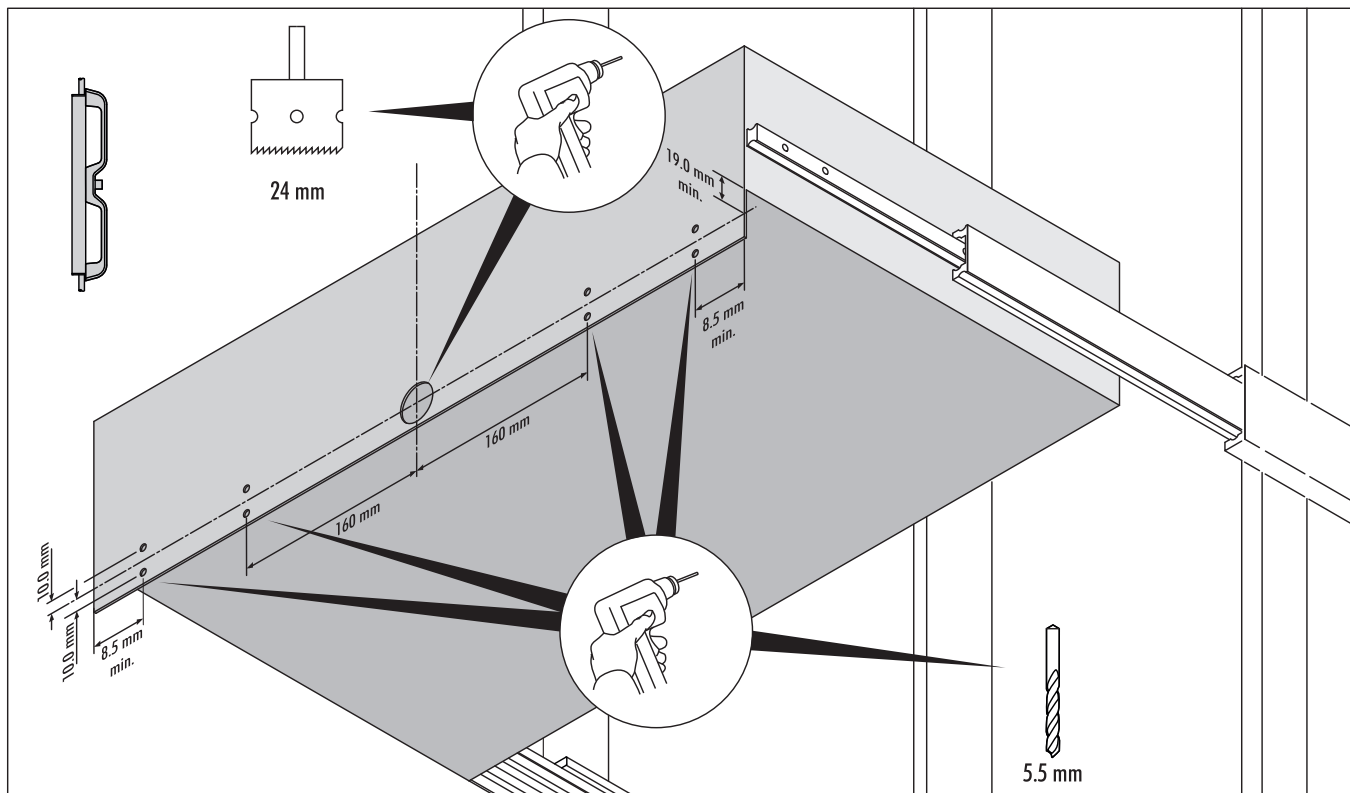

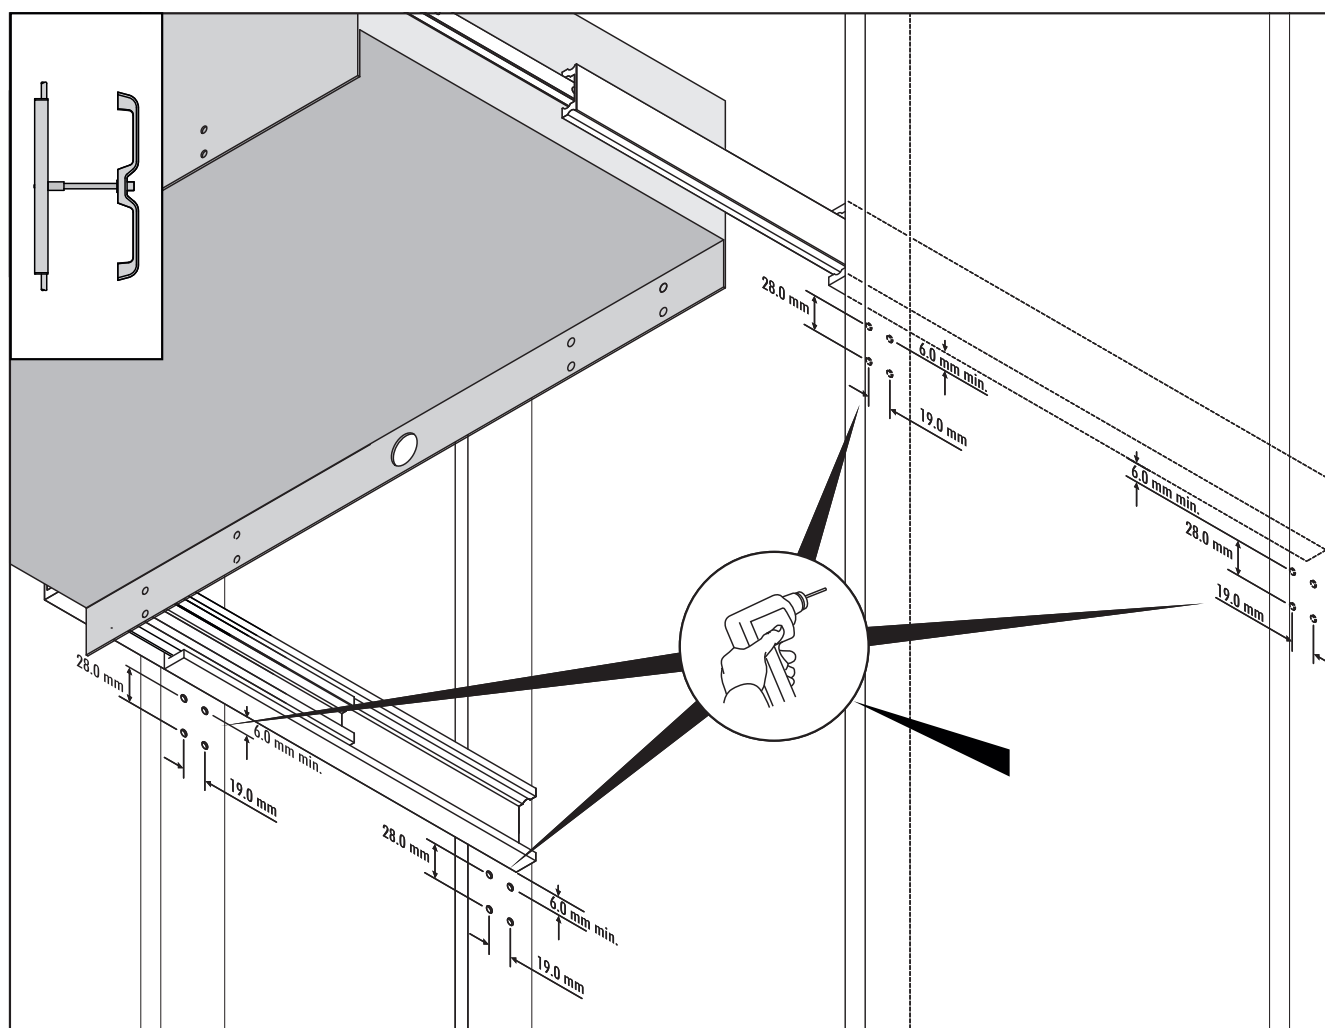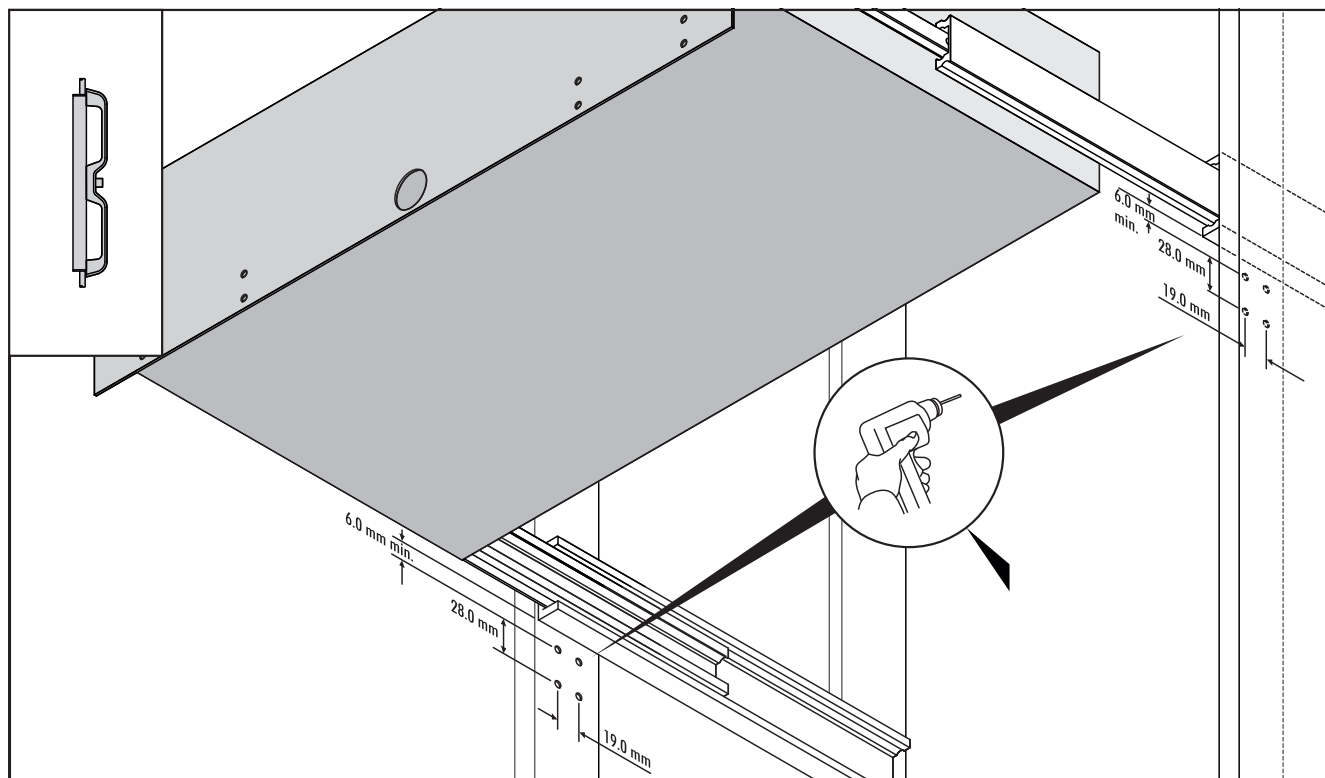

상황에 맞는 드릴링 및 고정

